

## Anziehvorschrift Zylinderkopf

## Tightening Instructions for Cylinder Head

## Instructions de serrage pour culasse

## Prescripciones de apriete para culatas

549.350


passend für / suitable for  
adaptable à / adaptable a

Mercedes Benz




Das Original

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo

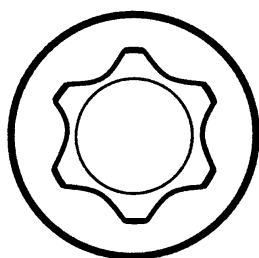

132.180  
M 10x1,5x165

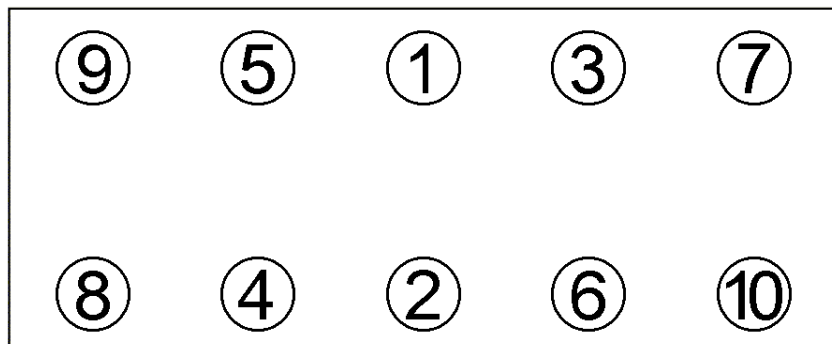

Anziehen/  
Tightening/  
Serrage/  
Apriete

M10  
45 Nm  
90°  
90°

M8  
20 Nm

## Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

## Motortyp / Engine type / Type de moteur / Tipo de motor

1.8 Ltr. Turbo

Mot: M 271.820,860

115-150 KW (156-204 PS)

W204              C180CGI, C200CGI, C250CGI

W212              E200CGI, E250CGI

C207/A207      E200CGI, E250CGI

## Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

[service@elring.de](mailto:service@elring.de)

24/11/12

**\*549.350\***